


**PUMP HOUSE UTILITY HEATER  
INSTALLATION AND OPERATION INSTRUCTIONS  
MODELS RPH1-5A, RPH2-5A**

1. Mount Heater a minimum of 18 inches from floor.
2. Disconnect all electrical service before proceeding, remove the grille enclosure, make all wiring connections in accordance with the National Electric code and/or other applicable codes.
3. Reinstall the grille enclosure, restore electrical power to heater, adjust thermostat as desired. The thermostat temperature range is 35 - 65 degrees F.
4. **Caution:** Do not operate heater without grille enclosure installed; do not block heater in any manner.

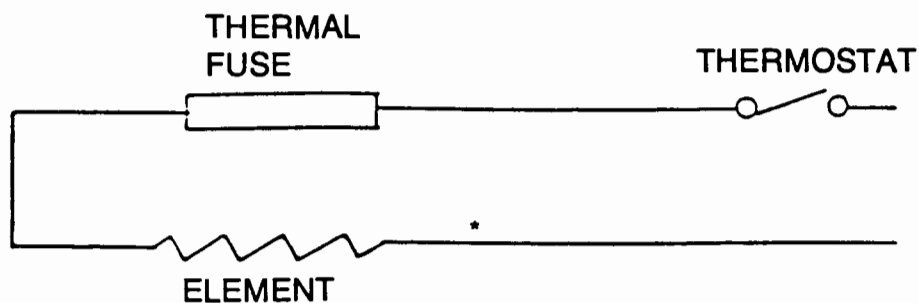

\*WHITE WIRE 120 VOLTS  
BLACK WIRE 240 VOLTS



**TPI Corporation**  
P.O. Box 4973  
Johnson City, TN 37602  
Tel. (423) 477-4131  
Fax (423) 477-0084

<u>Item</u>	<u>Name of Part</u>	<u>Part No.</u>	<u>Required</u>	
1	Rear Housing Assembly	60710 - 001	1	
2	Bushing	40881 - 011	1	
3	Thermostat Assembly	50395 - 001	1	
4	Cup Washer	41420 - 004	1	
5	Ground Screw	1458	1	
6	Ground Screw	1062	2	
7	Screw	1022	1	
8	Lockwasher (star)	1035	1	
9	Sheet Metal Screw	1006	6	
10	Grille Enclosure	60697 - 001	1	
11	Thermostat Knob Ass'y.	43989-001	1	
12	Heating Element Ass'y.	60712 - 001	1	120V - 500W
12	Heating Element Ass'y.	60712 - 002	1	240V - 500W

**Note:** When ordering replacement parts, be sure to include the complete heater model number and part number.

